

Perfect Finish™
FibaTape®
SELF-ADHESIVE WALL REPAIR FABRIC


- Repairs & reinforces reoccurring cracks
- Surface repairs
- Pet scratches & damage
- Peeled drywall
- Damage from tile or wallpaper removal

TOOLS & MATERIALS

- FibaTape wall repair fabric
- Taping knife
- Joint compound
- Sandpaper or sponge



Self-Adhesive

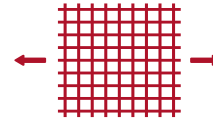

Wide Width



Professional Finish



PROJECT TIME: 15-30 min + dry time



SKILL LEVEL: Easy

INSTRUCTIONS:

1. Clean area to be repaired, removing any loose debris. If necessary, widen crack so the drywall compound can penetrate.
2. Apply the Wall Repair Fabric extending 1" (2.5 cm) beyond each end.
3. Apply only enough compound to penetrate the mesh and fill the joint. (Figure B)
4. When completely dry, sand lightly and apply a wider finish coat. Apply additional finish coats if necessary.

